



NOTE:

1. Width of opening to be less than one third of panel width.
All panels shown are 600mm wide but can be 300-600mm
2. Penetrations should be specified at the time of ordering to ensure additional reinforcement is allowed for around openings.
3. Notches should not be overcut as additional reinforcement may be cut which could significantly reduce the panels performance

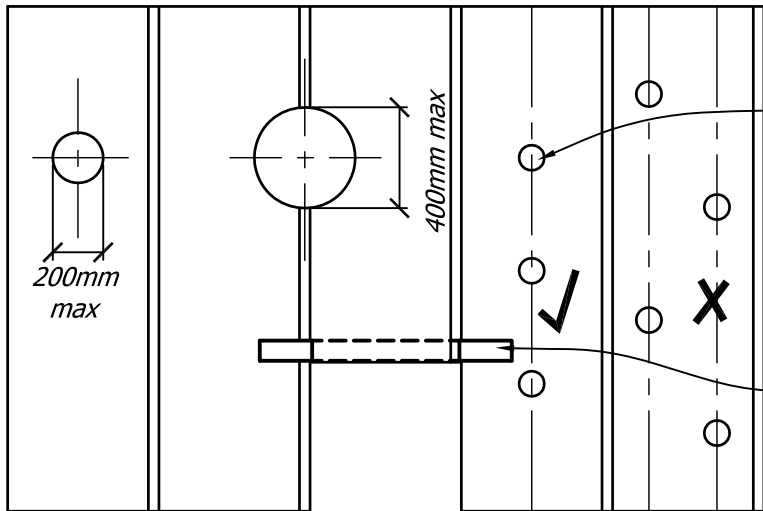

NOTE: Where penetrations do not align contact Supercrete™ Engineer for design advice

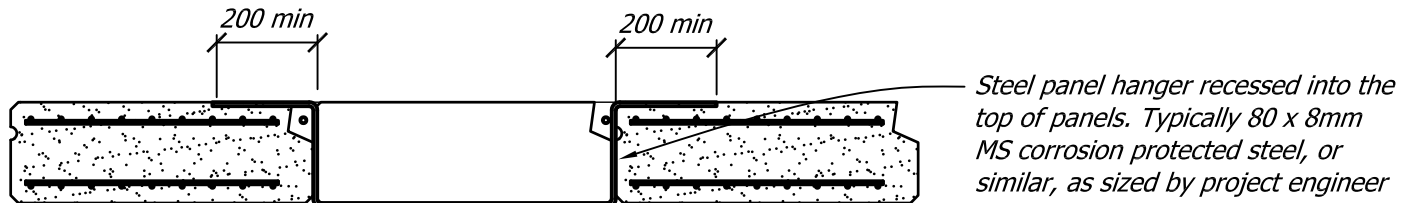

Copyright © Superbuild International Ltd 2013

Supercrete™

SFP CONSTRUCTION

Title: **Structural Floor Panels Penetrations in Floor Panels**

Date: October 2013

Scale: N.T.S.

Detail No. **SFP 2-3**

This drawing must be read in conjunction with all the Supercrete Structural Floor Panels Design Guide