


Fill with Supercoat™
Superbond Adhesive flush
with panel surface

14-10 x 100mm coarse
thread bugle head screws

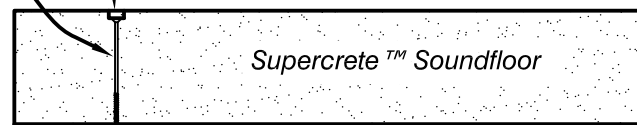

Construction adhesive

Double timber joists
(may vary at exterior
walls)

Copyright © Superbuild International Ltd 2013

Supercrete™

Title: Supercrete™ Soundfloor
End Panel Fixing to Timber Joist

**SOUNDFLOOR
CONSTRUCTION**

Date: December 2013

Scale: 1:5

Detail No. 3.1.4

This drawing must be read in conjunction with all the Supercrete™ Soundfloor Design Guide